


Goss Model E-25 Regulators

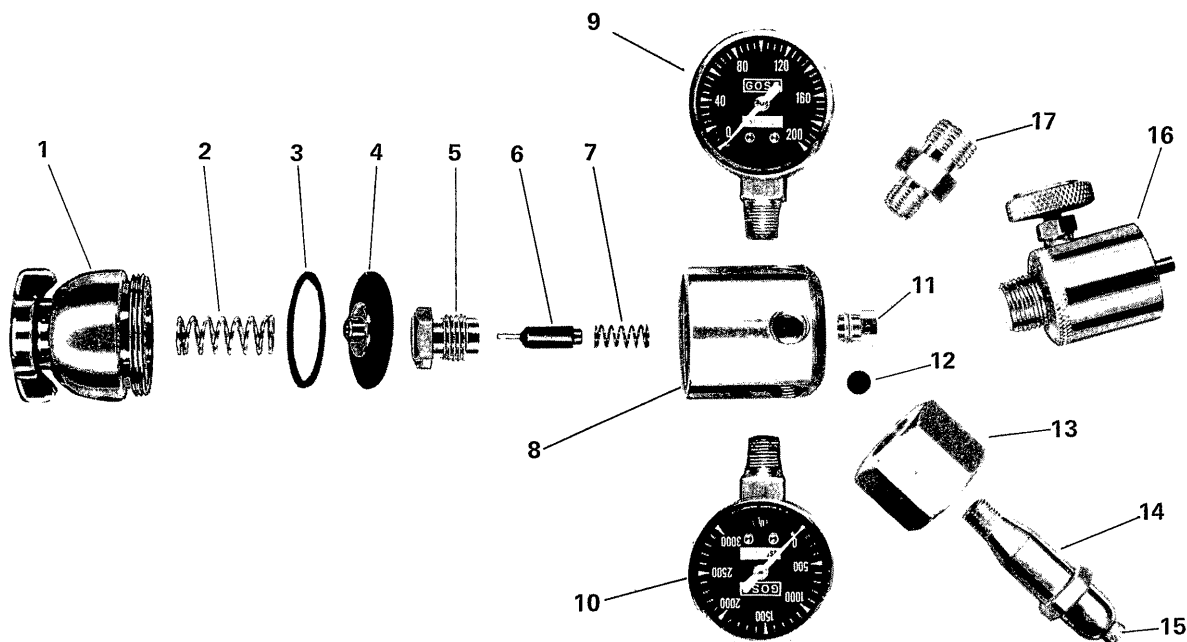


REF. NO.	MFG. NO.	S-S NO.	DESCRIPTION	CODE	REF. NO.	MFG. NO.	S-S NO.	DESCRIPTION	CODE
	EA-25, EA-25-CA		Regulator, Gas	A	10	STE-145	GS-094	Gauge, 0-400#	A-E
	EA-25-B, EA-25-BA		Regulator, Gas	B		STE-147	GS-096	Gauge, 0-3000#	F
	EA-25-DA, EP-25-D		Regulator, Gas	C	11	BRS-414	GS-086	Safety Assembly	F
	EA-25-M, EA-25-MA		Regulator, Gas	D				None Used	A-E
	EP-25, EP-25-A		Regulator Gas	E	12	BRS-291	GS-197	Rupture Disc	F
	EO-25, EO-25-A		Regulator, Oxygen	F				None Used	A-E
1	BRS-500		Bonnet Assembly	A-F	13	BRS-349	GS-079	Inlet Nut	A
2	STE-143	GS-092	Range Spring	A-E		BRS-357	GS-081	Inlet Nut	B
	STE-144	GS-093	Range Spring	F		BRS-360	GS-083	Inlet Nut	C,D
3	PLA-104	GS-090	Diaphragm Gasket	A-F		BRS-352	GS-080	Inlet Nut	E
4	RUB-116	GS-091	Diaphragm Assembly	A-F		BRS-346		Inlet Nut	F
5	BRS-282	GS-072	Seat Nut	A-F	14	BRS-345	GS-077	Stem	A
6	BRS-411	GS-085	Seat	A-F		BRS-359	GS-082	Stem	B
7	STE-170	GS-194	Seat Spring	A-F		BRS-361	GS-084	Stem	C,D
8	BRS-566		Body	A-E		BRS-343	GS-075	Stem	E
	BRS-296	GS-067	Body	F	15	BRS-344	GS-076	Stem	F
9	STE-146	GS-095	Gauge, 0-30#	A-E		STE-172		Filter	A-E
	STE-148	GS-097	Gauge, 0-200#	F		BRS-367	GS-087	Filter	F
					16	BRS-579		Inlet Valve	C
								None Used	A,B,D-F
					17	BRS-382	GS-088	Outlet, 3/8-24 A Size	A-E
						BRS-381	GS-013	Outlet, 3/8-24 A Size	F
						BRS-328	GS-073	Outlet, 9/16-18 B Size	A-E
						BRS-329	GS-074	Outlet, 9/16-18 B Size	F

Goss

Model EA-G


Regulators

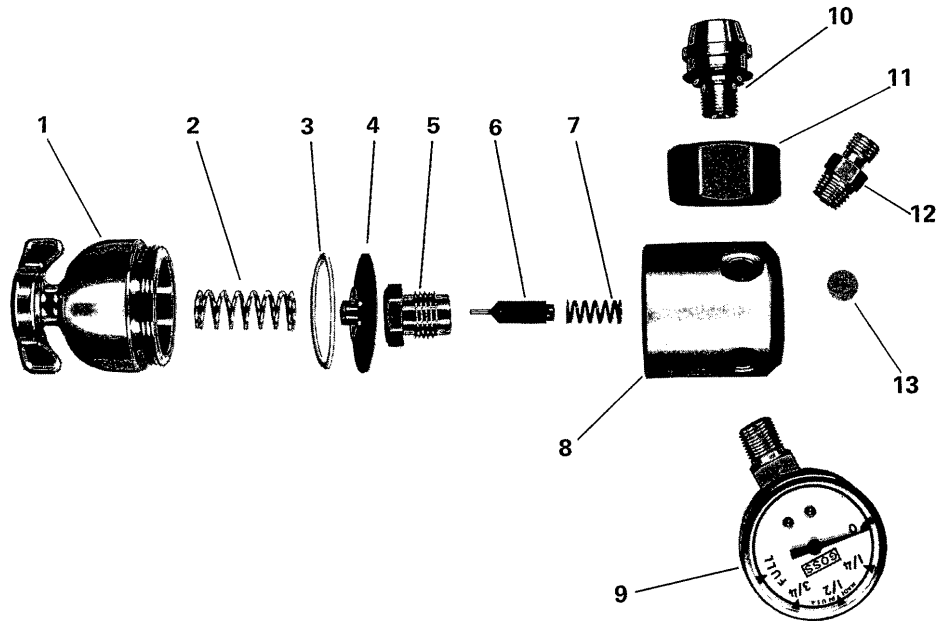

REF. NO.	MFG. NO.	S-S NO.	DESCRIPTION	CODE	REF. NO.	MFG. NO.	S-S NO.	DESCRIPTION	CODE
	EA-1G		Regulator, Gas	A	8	BRS-273		Body	A-D
	EA-2G		Regulator, Gas	B	9	MA80-16	GS-137	Gauge	A, B
	EA-3G		Regulator, Gas	C				None Used	C, D
	EA-4G		Regulator, Gas	D	10	BRS-359	GS-082	Inlet Stem	A, C
1	BRS-500		Bonnet Assembly	A-D		BRS-361	GS-084	Inlet Stem	B, D
2	STE-143	GS-092	Range Spring	A-D	11	BRS-357	GS-081	Inlet Nut	A, C
3	PLA-104	GS-090	Diaphragm Gasket	A-D		BRS-360	GS-083	Inlet Nut	B, D
4	RUB-116	GS-091	Diaphragm Assembly	A-D	12	BRS-382	GS-088	Outlet, 3/8-24 LH	A-D
5	BRS-282	GS-072	Seat Nut	A-D		BRS-328	GS-073	Outlet, 9/16-18 LH	A-D
6	BRS-411	GS-085	Seat	A-D	13	STE-172		Filter	A-D
7	STE-170	GS-194	Seat Spring	A-D					

Goss

Model EP-1G, 2G, 4G & 4GH Regulators

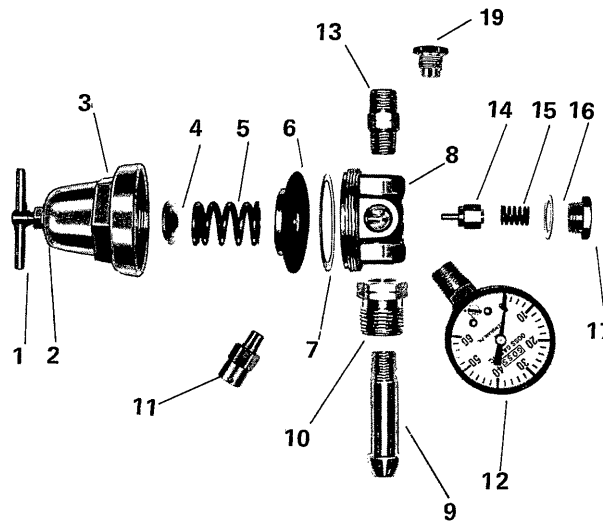

REF. NO.	MFG. NO.	S-S NO.	DESCRIPTION	CODE	REF. NO.	MFG. NO.	S-S NO.	DESCRIPTION	CODE
	EP-1G		Regulator	A	13	BRS-331	GS-099	Outlet	A-D
	EP-2G		Regulator	B	14	BRS-509		Seat	A-D
	EP-4G		Regulator	C	15	BRS-511		Seat Spring	A-D
	EP-4GH		Regulator	D	16	BRS-510		Backcap Washer	A-D
1	BRS-501		PA Screw	A-D	17	BRS-512		Backcap	A-D
2	BRS-502		Lock Nut	A-D	18			Bonnet Screws, None Used	A-D
3	BRS-503		Bonnet	A-D	19	BRS-655		Plug	B
4	BRS-504		Spring Cap	A-D				None Used	A,C,D
5	BRS-505		Range Spring	A-D					
6	BRS-506	GS-145	Diaphragm Assembly	A-D					
7	BRS-507		Diaphragm Gasket	A-D					
8	BRS-508		Body	A, B					
	BRS-496		Body	C, D					
9	BRS-355		Inlet Stem	A-C					
	BRS-348	GS-100	Inlet Stem	D					
10	BRS-353		Inlet Nut	A-C					
	BRS-631		Inlet Nut	D					
11	BRS-495		Relief Valve	C, D					
			None Used	A, B					
12	MP-673		Gauge	A,C,D					
			None Used	B					

